



SNOWMAN FIGURINE 1.5" DIGITAL PHOTO FRAME

See Things Differently™

INSTRUCTION MANUAL



1.5 Inches Digital Frame Service Manual

Special suggestion

ATTENTION: For your and others' security, please refrain from handling or watching this album while driving. A few light or dark spots may be on the LCD. This is a very common phenomenon in such matrices that reveal technology. If the image does not show properly or if the LCD breaks down, please do not attempt to repair it your self. This display is made up of several accurate electronic elements and it may get damaged if it is removed or repacked. If it breaks down, please close the power immediately, contact your local distributor, or notify our company.

Foreword

A digital photo frame is not only an extremely exquisite, dense, and luminouscent appearance design with a portable and optional function, but it is also changing the way images appear in a traditional photo frame.

We thank you for choosing our company' s digital multimedia album. In order to use this album skillfully and as soon as possible, we are providing a user's manual with detailed content and instructions. Please read this manual before your first use.

The content in the user's manual was arranged to be comprehensive and easily understandable. The information therein is correct and reliable and we exerted every effort to avoid mistakes. Still, if mistakes are inevitably found in the printing, please bear with us and forgive us.

Safety and maintenance

In order to guarantee your digital multimedia album a long life and effective performance, please consider the following factors when programming its settings:

- 1) Please read this manual. Follow it and operate the album correctly to conform to the warnings and instructions in detail.
- 2) Before using for the first time, please read this manual in detail.
- 3) Please keep the album away from water or other liquids as it may damage the product.
- 4) Do not apply heavy pressure on or to the album as doing so may damage the product. Place the album on a smooth and steady surface and avoid dropping or shaking it.
- 5) The LCD display screen is the important component of the digital multimedia album. Therefore, do not knock or push it.
- 6) Before cleaning the album, please shut down the unit first. Please use a soft cloth to clean. Do not use strong chemicals, cleaners, or sprays on it.

LCD Screen Maintenance

The LCD screen requires great care. Please pay attention to the following warning notes:

- 1) If you need to clean the LCD screen, please use a soft tissue to gently polish its surface.
- 2) Do not directly put hands or other sharp article on the surface of the unit. Do not directly push out the cleavage on the screen surface.
- 3) Do not put article above the album or press the outer cover of the album as this may break the LCD.

Table of content

Safety and Maintenance

1. Know the player: 4
- Appearance and buttons: 4
- Battery: 4
2. Function summary: 5
- Picture browsing: 5
3. Function introduction of menu: 6
- Enter menu: 6
- Shut-down: 6
- Recall the mode: 6
- Time operation: 6
- Setting up the automatic review: 7
- Time showing: 7
- Writedown: 7
4. Connect the computer: 7
5. the operation instructions of picture conversion tool: 7
6. Specifications: 13

1. know the player

Please read carefully before using this equipment.

Thank you for purchasing this portable digital photo display. It is quick and easy to download pictures into your photo display. You may view your favorite pictures stored in this photo display anytime, anywhere.



■ The definition of button function

MENU key: Press this key. It can start the machine, shut down, and control the function.

UP key: Previous one, retreat one

DOWN key: Subsequent one, down back

USB interface: Used to digital album charging and picture download.

Feature

1. Photo display: JPG, BMP
2. Manual or Auto play mode
3. Time & Date Display

Accessory

1. Photo Viewer *1

2. 5Pin Mini USB Cable *1
3. Driver CD *1
4. User Manual *1
5. AAA Battery *2

*1This machine supports USB to supply power. In other words, it can play even without a battery.

2. Function summary

- The digital stream function

Support some format's conversion, download and preview such as bmp, jpg, etc.

- Many kinds of utility functions such as clock, luminance regulation, automatic switch etc.

Attention: JPG, BMP, etc. can not be processed until it passes the conversion tool attached.

Picture browsing



Open camera various menus through pressing Mode key. The menu includes: Shut down, reset mode, automatic switch machine, time showing, LCD luminance regulate, withdraw.

- Press MENU key to start the machine. Up-downs keys browse the picture.

○ You Can set up manually browse and automatically browse. Automatic it never can directly look at the picture. Please search sharing mode.

- When there is no file in the photo frame, it will display the following when the machine turns on.



3 Function Introduction of Menu

Press menu key, enter into menu setting



Pressing up or down key can up or down choosing, when you have made your choice. Press menu key to detail setting

Different function mode and basic operation

1) OFF

Turn off operation: choose turn off. Press menu key, the album turn off.



2) Slowing mode



The operation of showing mode:

Choose showing mode: press menu key to enter, press up or down to choose.

Choose automatic mode: press menu to enter, according up or down to adjust time, Press menu to drive back.

Choose automatic mode: you can automatically preview the picture according set up time.

Choose manual mode: press menu to withdraw. You can control the preview picture by up and down key.

3) Clock set



Operate the time setting

Choose time setting: Press menu to enter

You can use menu key to control year, month, day, second, week. Up and down key can change time cost.

Press menu key to withdraw

4) Auto ON/OFF



Choose auto on/off setting, press menu to enter

Choose on/off

You can set the on/off time by "on" key. The time is set the same between on/off. Up and down key to adjust time value.

Choose on/off

You can not set the time by off key.

5) Clock Disp



The operation of showing time

Choose time show, press menu key to enter

It will show normal time when you choose Disp clock: normal

2007-01-01
02:21:42
Monday

The time will show in preview picture when you choose Day clock watermark.



4) LCD Contrast

contrast

5

Operate the adjustment of brightness

Choose contrast adjustment, press menu to enter

Adjust contrast value by up and down key, the scope of brightness value is 0-9

To Exit



Withdraw operation

Choose exit, press menu to withdraw

Connect computer

When photo frame and computer have connected with USB line, the screen will show



USB charge: choose such function to charge the photo frame and supply electron

USB update: you can download by computer and the software update according such function

Five: the operation instructions of picture conversion tool

This tool is used for the picture that can change other format. The picture form is JPG, BMP, etc.

Attention: you must install drive software attached in the CD before using this product.

When you have connected the computer and photo frame with USB, you can choose update mode, press menu to confirm



1. Operate the download procedure that attaches at random



2. choose the picture which need to be converted.



Edit the photos

 print it, you can share your pictures  print it you can edit them

 zoom it you can edit your picture detail or enlargement

 print it you can preserve the picture to your computer Print  the

connection is beginning

6. When all pictures have finished, press the reference  pictures will be sent to the photo frame



7, when download is over, at all popup dialogue frame, choose
 "ok" to exit conversion



8.Specifications

Product Family	DSM500JPH000000
Product resolution	1280x800
LCD	13.1" x 8"
Memory/Power	2x4GB 512x4GB
Memory Capacity	4096GB
File Mode	Yes
Automatic Energy Saving	1-150s
Transmission Interface	USB Interface (Type 1.1)
Power Supply	2W, A/C (V) Battery USB (V) (optional)
Working Temperature	0°C-40°C
Operation System	Win 95/98/NT/2000/XP/Vista